

# Equipment

## **Classroom podium is not working correctly.**

Use the following steps.

1. Properly shut down the computer.
2. Unplug podium power from the wall.
3. Wait 30 seconds.
4. Plug podium power back in the wall.
5. Press power on the front of the computer.

System should be back in service.

Unique solution ID: #1030

Author: Shon E. Wagner

Last update: 2018-09-27 18:38